


INKJET PRINTER

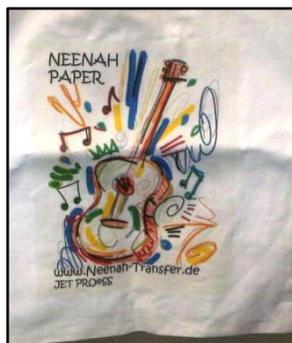

JET-PRO®SS HEAT TRANSFER PAPER

Product #9811P0

Designed for the heat transfer of photos and images using inkjet printers to **light colored T-shirts, sweatshirts, mouse pads, coasters, puzzles and leather goods**. Works well with **cotton, cotton blends and synthetics**. This is the easiest product to use and has the least ‘hand’.

RECOMMENDATIONS

Product #	Fabric Color	Hot Peel	Warm Peel	Cold Peel	Hand Iron
9811P0	White & Light	✓	✓	✓	✓

COMMERCIAL PRESS INSTRUCTIONS

PRINTING INSTRUCTIONS:


1. Print the image in reverse/mirrored format.
2. Trim away the unprinted areas of the transfer if desired.

PRE-TRANSFERRING INSTRUCTIONS:

1. Prepare the substrate by ensuring the surface is clean, dry and wrinkle free.

TRANSFERRING INSTRUCTIONS:


1. Place the transfer on top of the garment with the image side touching the substrate (backing paper is facing you).
2. Press **30 seconds @ 375°F (190°C)** using **medium/heavy** pressure.
3. Peel **the paper while** still **hot** in a smooth even motion. (Paper may be peeled at any temperature, depending on what end ‘feel’ results are preferred).
4. For best “hand”, stretch the garment while hot.

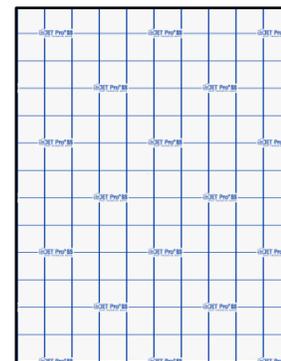

WASHING INSTRUCTIONS: Turn garment inside out and wash in cold water using a mild detergent. Do not use bleach. Dry on low-heat setting. Do not iron directly on the transferred area. **IMPORTANT:** Heat presses vary in accuracy. The sellers and manufactures maximum obligation shall be to replace any paper that has proven to be defective.

BDF Graphics

510 Gordon Baker Road, Toronto, ON M2H 3B4, Canada
 Toll free: 1-855-502-8988 www.bdfgraphics.com

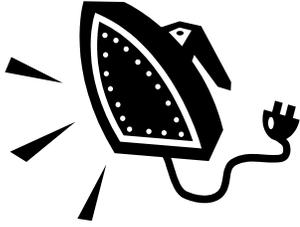

JET-PRO[®]SS HEAT TRANSFER PAPER

HAND IRONING INSTRUCTIONS

Product #9811P0

PRINTING INSTRUCTIONS:


1. Print the reversed/mirrored image on the coated side of the paper.
2. Trim away the unprinted areas of the transfer.

PRE-TRANSFERRING INSTRUCTIONS:

1. Preheat iron to highest setting – do NOT use steam (empty all water).
2. Iron on a SMOOTH HARD surface; do NOT use an ironing board.
3. Place a pillowcase on the surface and iron the pillowcase removing any wrinkles.
4. Place substrate on pillowcase and iron it to remove wrinkles.

TRANSFERRING INSTRUCTIONS:

1. Place image on top of garment with image facing down (backing of paper is facing you).
2. Using 2 hands, using heavy pressure slide the iron up and down (vertically) over the entire image for 90 seconds, then repeat going from left to right (horizontally) for 90 seconds.

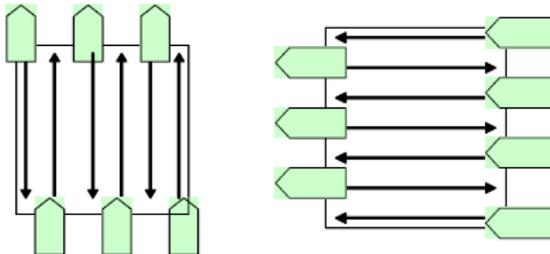

3. Peel the backing paper off the image immediately after completion of ironing.

*for smaller transfers one-half or less, the ironing time is reduced to ironing vertically 45 seconds and horizontally 45 seconds. If the transfer area is smaller than the iron, iron for 30 seconds with heavy pressure.

WASHING INSTRUCTIONS: Turn garment inside out and wash in cold water using a mild detergent. Do not use bleach. Dry on low-heat setting. Do not iron directly on the transferred area. **IMPORTANT:** Heat presses vary in accuracy. The sellers and manufactures maximum obligation shall be to replace any paper that has proven to be defective.